
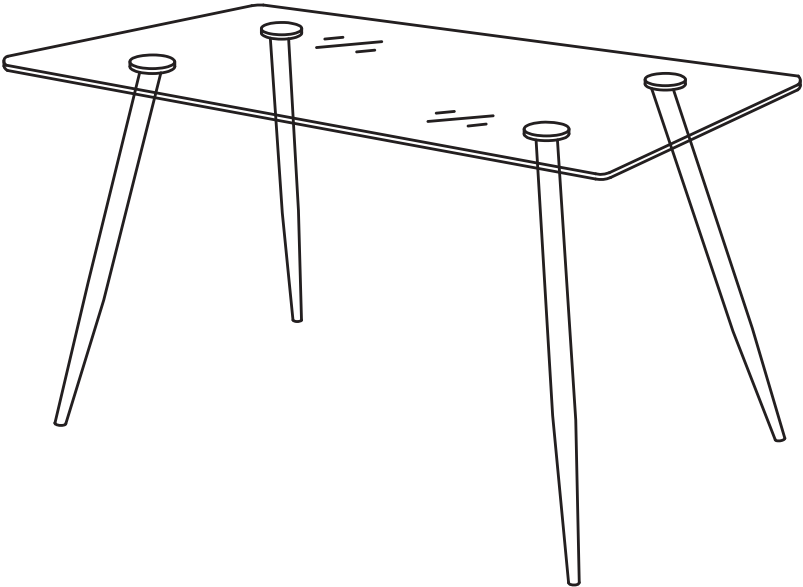


Ref. HT003-AS


sn: 8065



BOLSA 1/BAG 1/SAC 1/ WERKZEUGBEUTEL 1

	1	A	
	4	B	
	12	C	Ø10x16
	12	D	M10x12
	1	E	Ø 5X70

GARANTÍA/GARANTEE/GARANIE

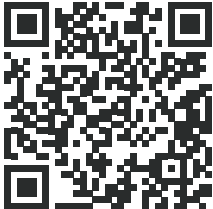


<http://szsuares.com/index.php/politica-de-devoluciones>

VIDEO-ESQUEMAS DE MONTAJE EN:
ASSEMBLED-INSTRUCTIONS VIDEO IN:
VIDEO-INSTRUCTIONS DE MONTAGE:
VIDEO-SCHBMAIN



<https://www.youtube.com/channel/UCSNmriXEx-jpc-0kKAHvMNjg>

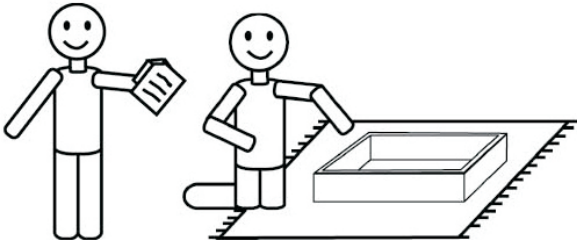

1977 SPAIN
FURNITURE FACTORY
szsuares.com

